

 
RETAY PM49 CAL. 4,5mm



OPERATION


BEFORE SHOOTING







 Using a hex key, unscrew the magazine cap counterclockwise





- 1. Turn the magazine cap counterclockwise and insert the CO2 cartridge into the magazine. Quickly tighten screw A clockwise to pierce the cartridge inside the magazine.
- 2. Insert the CO₂ cartridge into the magazine by tightening the cap clockwise to pierce the cartridge.
- 3. Pull the magazine follower down.
- 4.Load BB pellets into the magazine.
- 5. For better performance, load BB pellets one by one.
- 6. Maximum magazine capacity: 18 BB pellets.

SHOOTING

- 1.Insert fully loaded magazine in the airgun unti you hear the sound of "CLICK".
- 2.Aim the target and pull the trigger.



CAUTION: Release all of the gas in the magazine when it will not use in long-term period.

SAFFTY



SAFETY ON



BREAK DOWN FAO

- 1.Bad quality BB is the main reason to cause BB jam. Please use high quality BB avoid jamming problem.
- 2. When BB jamming, first please release the magazine from pistol then use a soft stick (diameter no bigger than 4.4mm) to clear up the barrel.
- 3. Please avoid dry firing, far it could cause parts deformed or damage.
- 4. Pulling trigger will load BB in the barrel. Therefore, please do not pull the trigger half way and release the trigger. This action could load 2 BBs in the pistol and cause jamming.
- 5. Please spray lubricant(with silicone oil type) at firing pin and trigger pin after a certain of use, pictures shown.









WARNING

READ THIS OWNER'S MANUAL COMPLETELY

This airgun is intended for recreational or training purposes. To prevent improper handling, modification or alteration causing malfunction or accident, please read the owner's manual carefully. Enjoy the pleasant shooting experience by proper operation.

- 1.Do not put your finger on the trigger except shooting.
- 2.Please choose safe and proper target.
- 3.Please always keep the airgun on safe and unloaded when not using.
- 4.Like all mechanical devices, an airgun safety could fail. Always handle the airgun safely even when the safety is "on safe". Never point the airgun at any people.
- 5.To avoid ricochet. Never shoot at a hard or flat surface or at water.
- 6.Keep the airgun aut of reach for children.
- 7 .Your backstop should be inspected for wear before and after each use. Discontinue use of the backstop if surface shows signs of failure or ricochet.
- 8.Only use high quality 4.5mm steel BBs. Never use (1) BB diameter larger than 6 mm 2 BB with unsmoothed surface (3) reused BB that has been fired (4) incorrect projectiles not design far this airgun.
- 9.Do not expose CO2 cartridges to heat or store them at temperatures above 50°C (122° F). CO2 cartridges may over heat or explode at temperatures above 50°C (122° F). (122° F). CO2 cartridges may over heat or explode at temperatures above 50°C (122° F).
- 10.Check any gun that has been dropped to ensure that its function has not been affected.

 
★Always wear eye protection when using airgun.



★Read the owner's manual before using the airgun.



★When in public, always carry the airgun in a locked carrying case or bag. Make sure it is unloaded and on safe.



★To Avoid accidental discharge, do not look directly into the barrel.



★Never brandish or aiming this airgun at any people or animals. Brandish this airgun in public is dangerous and may be a crime.



★Always be aware of your surrounding before and during shooting and select a safe area for target practice.



★Disassemble, modify, or alter of your airgun may cause malfunction, revoke your warranty, make it unsafe to use and even break the law.






SERIES PARTS LIST

NO	NUIT
P09	SAFETY ACCESSORY
P23	GRIP
P26	MAGAZINE BASE ACCESSORY
UKG01-P31	VALVE PAKING
P42	MAGAZINE FOLLOWER
P44	FRONT BARREL CAP
KM44-P45	INNER BARREL CAP
Z01	FRAME (L)
Z02	FRAME (R)
Z03	TRIGGER
Z04	SAFETY (L)
Z05	FIRING PIN
Z07	TRIGGER CONNECTOR
Z10	SAFETY LOCK
Z11	MAGAZINE CATCH
Z21	HAMMER
Z46	BARREL TOW
Z48	MAGAZINE
B003	BEARING

B03	FIRING PIN AXLE
B04	TRIGGER PIN
B05	TRIGGER CONNECTOR PIN
KM44-B06	VALVE
KCB75-B16	PUNCTURE VALVE
UKG01-B19	VALVE CAP
B41	BARREL
KG47-F401	VALVE SPRING GASKET
KG12-B215	PUNCTURE VALVE PACKING
E8004	BARREL WASHER
KG47-F401	VALVE SPRING GASKET
EA020	SCREW 2.3x6
EA061	SCREW 2.3x5
EA064	SCREW 2.3x6
EA066	SCREW 2.3x8
EA087	HAX NUT M5-0.8
ED008	O-RING
ED08	MAGAZINE BOTTOM CAP
SM2	BARREL SPRING
F01	TRIGGER BAR

F02	HAMMER AXIS
S01	GRIP BUCKLE
S03	SAFETY SPRING (L)
S05	FIRING PIN SPRING
S07	TRIGGER BAR SPRING
S08	MAGAZINE CATCH SPRING
S09	HAMMER SPRING
S10	PUMPER SPRING
KG47-S404	VALVE SPRING
KM47-S471	MAGAZINE SPRING
U1	INNER BARREL UNIT
U2	TRIGGER UNIT
U3	PUNCTURE VALVE UNIT
R01	RUBBER CHAMBER
G001	O-RING % 0.8x% 11.3id
G005	O-RING 1x4
G006	O-RING 1x5
G0013	O-RING 1.45x6_9id
G022	O-RING S-8

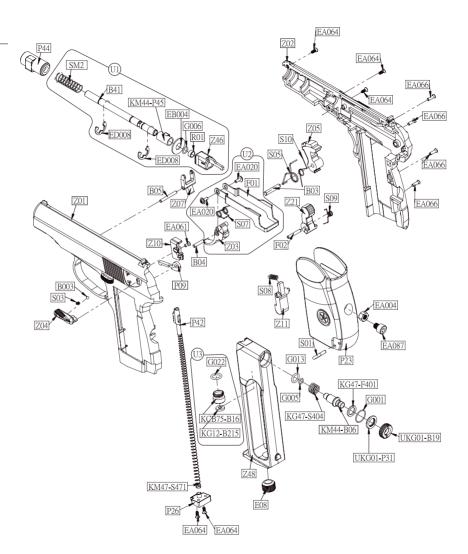

NOTES:	





Retay Arms Ltd. Sti.

Büyükkayacik Mh. 4. OSB, 103. Cd., No: 11, 42250 Konya/TURKEY

www.retayarms.com - www.retayusa.com

Retay Arms reserves the right to make modifications to the products shown in this catalogue at any time without prior notice. The finishings, colour and patterns shown in this catalogue are approximate, as a printed reproduction causes inevitable colour differences. The illustrations and descriptions contained in this catalogue are only provided as an indication.

